


3.8 Взрыв-схема клапана
Конструкция F79 A-LCD\F79B-LCD

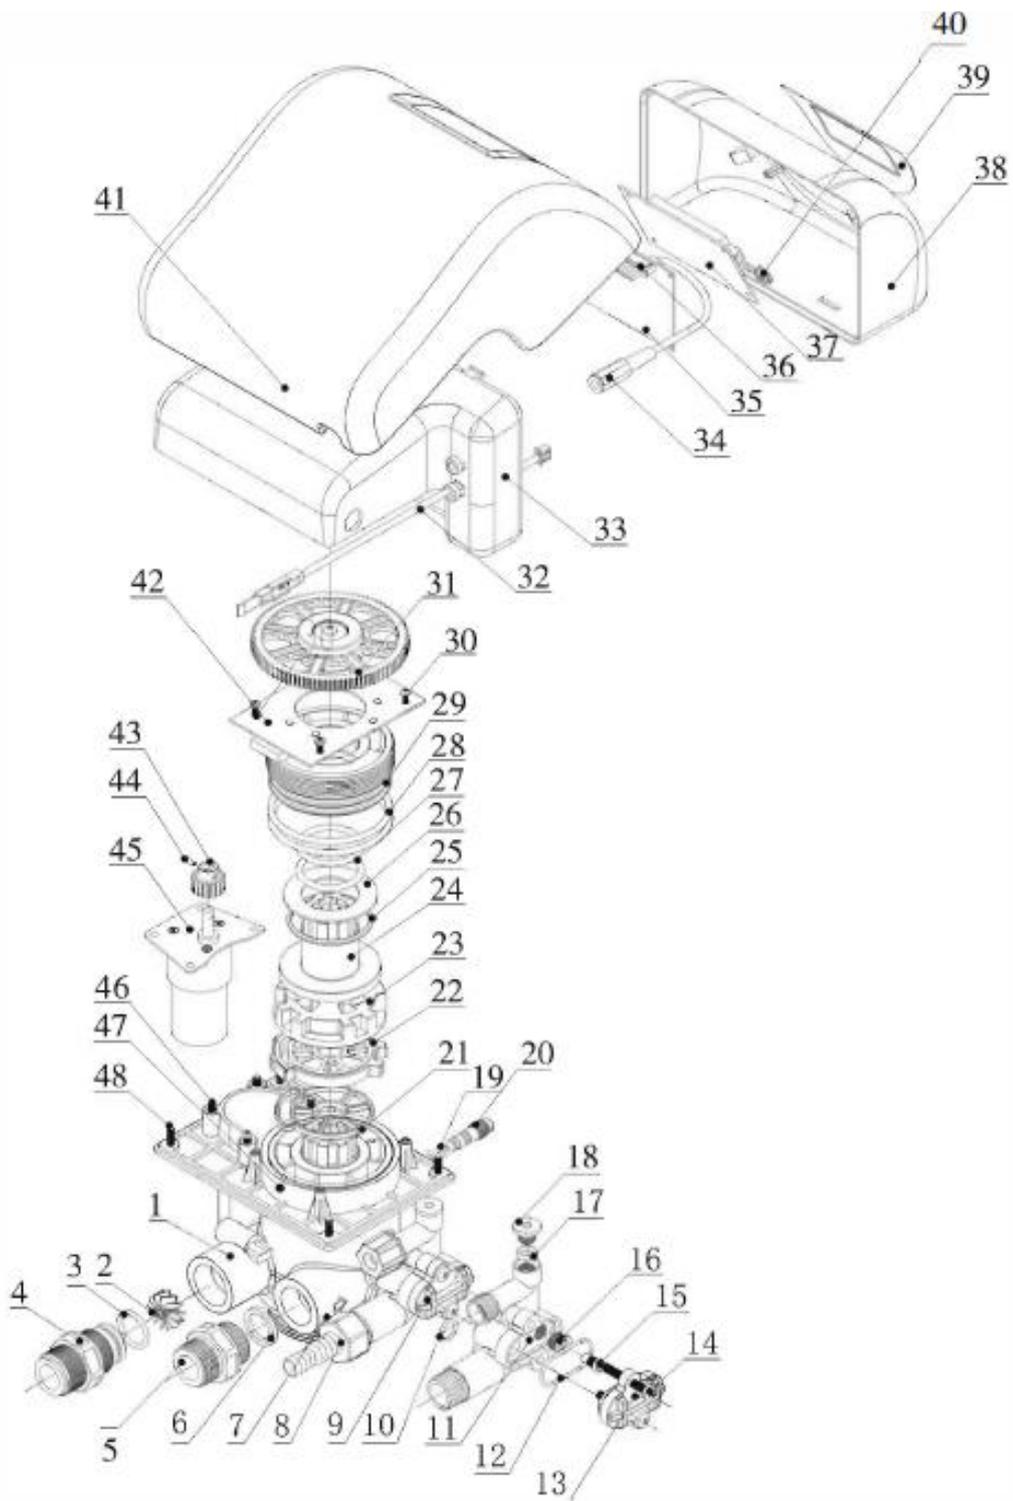

Составляющие компоненты F79A-LCD,F79B-LCD

Item No.	Description	Part No.	Quantity	Item No.	Description	Part No.	Quantity
1	Valve Body	8022029	1	25	Moving Seal Ring	8370064	1
2	Impeller	5436007	1	26	Anti-friction Washer	8216011	1
3	O-ring	8378074	1	27	O-ring	8378116	2
4	Flow Meter Connector	8458026	1	28	O-ring	8378126	2
5	Animated Connector	8458001	1	29	Fitting Nut	8092011	1
6	Seal Ring	8371019	1	30	Screw, Cross	8909008	4
7	O-ring	8378143	1	31	Gear	8241009	1
8	O-ring	8378078	1	32	Probe wire	8386001	1
9	O-ring	8378016	2	33	Dust Cover	8005013	1
10	O-ring	8378012	1	34	Wire for Power	8005014	1
11	Injector Body	8008001	1	35	Control Board	6382125	1
12	O-ring	8378025	1	36	Wire for Locating Board	5511004	1
13	Cover of Injector	8315001	1	37	Display Board	6381003	1
14	Screw, Cross	8902017	2	38	Front Cover	8300008	1
15	Throat, Injector	8467001	1	39	Label	8300004	1
16	Nozzle, Injector	8454001	1	40	Wire for Display Board	8865013	1
17	Seal Ring	8370003	1	41	Dust Cover	8300015	1
18	Plug	8323002	1	42	Locating Board	6380011	1
19	O-ring	8378003	3	43	Small Gear	8241015	1
20	Adjust Screw	8906002	1	44	Pin	8993001	1
21	Seal Ring	8370046	1	45	Motor	6158026	1
22	Fixed Disk	8469024	1	46	Screw, Cross	8902008	4
23	Moving Disk	8459026	1	47	Screw, Cross	8909008	4
24	Shaft	8259013	1	48	Screw, Cross	8909016	4

Примечание: Номера деталей в скобках указаны для F79B-LCD, кроме этого остальные детали применимы как к F79A-LCD, так и к F79B-LCD.